




Development Services Department
Building Division Handout

13831 San Pablo, CA 94806 • Ph: (510) 215-3030 • www.sanpabloca.gov

CITY OF SAN PABLO
City of New Directions

WINDOW FLASHING REQUIREMENTS

- ① Lap pan flashing over flap of housewrap. Then set window into sealant on top and two sides.

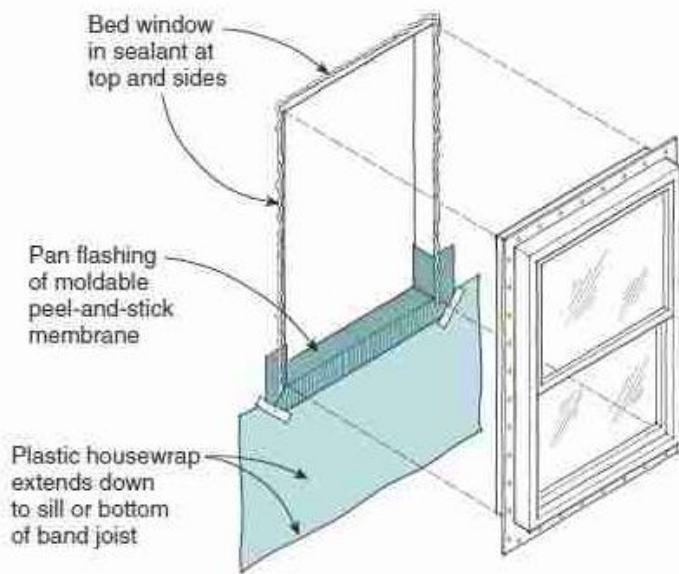

- ② Install side splines, then head flashing. Later weave housewrap under flap and tape along side jambs.

